

Item: Tether Cord

Description:

Used to transmit photos directly from camera to laptop during a shoot

Tethers in Studio:

USB C-USB C, USB extension, USB- Mini B, USB C- HDMI

Note:

-When renting you **MUST** specify what tether you need, putting “tether” does not tell us what kind of tether cord you need

-It’s always safe to keep the cord that comes with your camera in your camera bag- sometimes all of our tether cords are rented so all we have left are USB extension cords (which are compatible with almost all camera cords)

-Application needed to tether is Capture One or Adobe Lightroom Classic (apart of the Adobe Photography bundle)

How to Tether:

Adobe Lightroom Classic

-Plug tether cord into camera and laptop

-Turn camera on

-Open Lightroom Classic

-Press file (located top left corner)

-Press “Tethered Capture”

-Press “Start Tethered Capture”

-Change your “Session Name” to what you’ll be shooting

-Change “Start Number” to 1

-Under “Destination” choose where you would like your photos to end up

-Press “OK” and your tether will automatically connect

Capture One

-Plug tether cord into camera and laptop

-Turn camera on

-Open Capture One

-Press file (located top left corner)

-Press “New Session”

-Change “Name” to what you’ll be shooting

-Under “Location” choose where you would like your photos to end up

-Press “OK” and your tether will automatically connect

Troubleshooting

Sometimes tethering does not work on the first try. Next step would be to close the application and try again.